

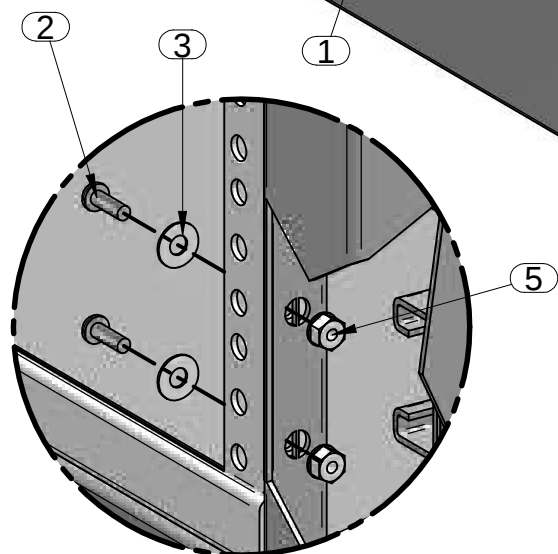


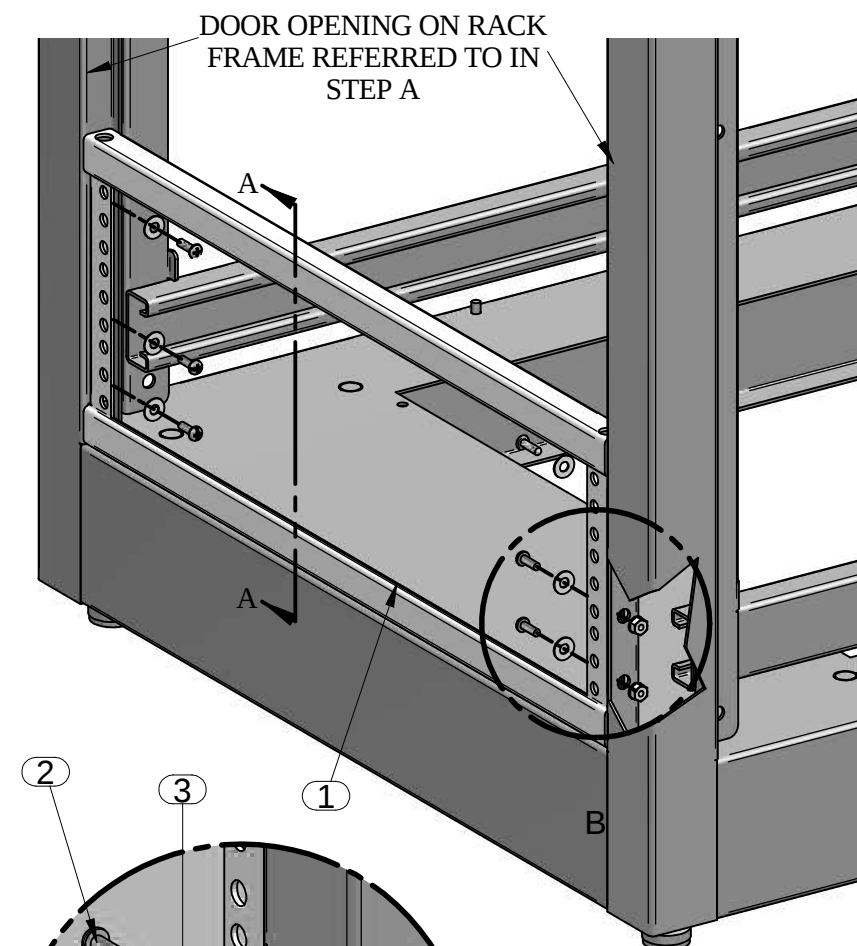

DETAIL B

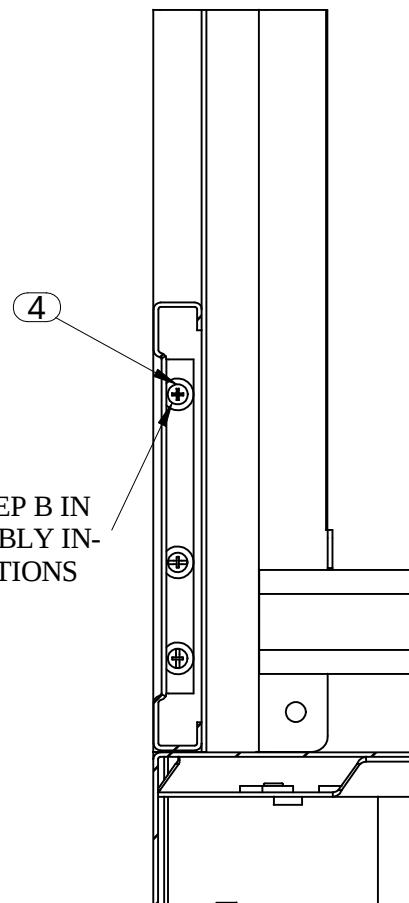

CROSS SECTION OF
BLOWER ADAPTER
A - A

SEE STEP B IN
ASSEMBLY IN-
STRUCTIONS

ASSEMBLY INSTRUCTIONS:

- A) Align bottom holes of adapter plate (item 1) with holes on bottom of frame sides in door opening. Install with machine screws (item 2) washers (item 3) and KEP nuts (item 5). (Detail B)
- B) If additional support is desired, use frame as template. Mark , center punch and drill a third hole (.136" / 3.5 mm dia) on each side and fasten with #8 self tapping screws (item 4) into upper hole of frame. (Section A-A)

PARTS LIST

ITEM No.	DESCRIPTION	QTY
1	ADAPTER PLATE	1
2	8-32 X 1/2 RD HD SCREWS	4
3	#8 WASHERS	6
4	#8 X 5/8 SELF TAPPING	4
5	8-32 KEP NUTS	4
6	10-32 CLIP NUTS	4

TOOL BOX




Pencil



Centre Punch



Electric Drill .136" (3.5 mm)



Phillips Screw Driver



Hammer



visit our website @ www.hammondmfg.com